

# Vibrating Probe Level Switch






































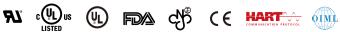



# PRODUCT INTRODUCTION

### **WORKING PRINCIPLE**

The Finetek vibrating probe switch is highly versatile and can be used for most almost any bulk solid application. This includes level detection of almost any granular, sandy, chip like, foodstuff, grain or powdery materials.

The operating principle is based on the changes of vibration frequency of the tuning fork when it comes into contact with a solid material.

The Vibrating probe contains piezoelectric crystals built into the vibration tube that produce vibrations/resonations at specific frequencies.

One element acts as a transmitter of the signal and the other receives the signal and converts it to electrical output.

When the Vibrating probe comes in contact with material the vibration is weakened/dampened and results in a frequency change which triggers the switch. It's ideal for applications where: the dielectric constant is low (where capacitance level switches can't be used); when material moisture content changes easily; low viscosity liquids; there is a combination of differing materials in the container/tank.

The Vibrating probe provides a reliable & maintenance-free means of process control for bulk solids. Easy mounting at almost any angle and basic calibration procedures will provide reliable functioning and less required monitoring. This device can withstand tough lateral loads and static electricity.

Furthermore, it eliminates the application issues associated with jamming and clogging between tines on a 'tuning fork' device Also; it is equipped with a Fail-safe that prevents malfunctioning caused by power cuts

### **FEATURES**

- Voltage supply range 20~250,50~60Hz VAC/VDC.
- SPDT Relay output, SSR MOSFET output.
- Sensitivity adjustment is available for different density mediums.
- Low wear and tear, maintenance free and self cleaning.
- Fine powders can be detected.
- Euro and UL certified Models available.

### **APPLICATION**

Solid Level Detection

Powders:

Powdered milk, flour, spices, coffee beans, coffee powder, tea, salt, sugar, grains, chocolate Tobacco, powdered cellulose, powdered clay, polystyrene powder, dry soot, soda ash, coal ash

#### Granular & plastics:

**G**ravel, glass fine power, granular plastics, foundry sand, cements, plastic pellets

#### Chip or pellet like:


**Fr**ozen potato chips, beans, peanuts, sweets and candy, animal / pet food

Wood shavings, chalk, steering chips, styrofoams, charcoals

#### **BENEFITS**

- No calibration required, easy use, sturdy and durable
- Rounded design prevents medium build up on probe
- Operates well under high temperature, humid and moist conditions
- High vibration force
   (also helps shake off build up)
- Fine powers can be detected.

#### STRUCTURE & DIMENSION

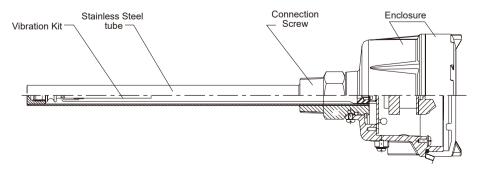


# **SPECIFICATIONS**

Dimensions (Unit:mm)	φ113 1/2"NPTx2 20 1"PT 275mm	φ113 108 1/2"NPTx2 20 1"PT 275~400 mm	φ113 108 1/2"NPTx2 20 1"PT φ27.2 350mm~4M φ29
Order No.	SC2100 【Standard Model】	SC2110 【Probe Extension Model】	SC2120 【Ultra Extension Model】
Level sensor housing		Aluminum / IP65	
Probe construction		SUS 304 / 316	
Mounting		1"PT	
Conduit		1/2"NPTx2	
Max. vertical load on rod.		177in.Lbs(20Nm)	
Operating pressure.		-1~150PSI (10BAR)	
Power supply		20~250, 50/60Hz Vac/ Vdo	С
Power consumption		10 VA (Max.)	
Ambient temp.		-40°C~60°C	
Medium temp.		-40°C~80°C	
Signal output	Relay, SPDT, 3A/	250VAC, 3A/28VDC, SSR(MC	SFET)400mA/60 VAC/ VDC
Min. material density sensed		Solid: ≥0.32g/cm³	
Time delay	0.6~1	L Second / Operate; 2~5 Seco	onds / Reset
Remote-test		Yes	
Vibrating frequency.		395~405HZ	
Selectable Fail-safe		Hi./ Lo.	
Selectable sensitivity		Hi./ Lo.	

# **SPECIFICATIONS**

Dimensions (Unit:mm)	φ113 108 1/2"NPTx2 20 1"PT φ10 φ30 600mm ~15M	φ113 108	φ113 108
Order No.	SC2300 【Cable Extension Model】	SC2500 【Corrosion-Proof】	SC2510【Corrosion-Proof & Extension Typ】
Level sensor housing		Aluminum / IP65	
Probe construction	SUS 304 / 316	SUS 304/316 Coating TEFLON	SUS 304/316 Coating TEFLON
Mounting	1"PT	Flange 1"(min.)	Flange 1"(min.)
Conduit		1/2"NPTx2	
Max. vertical load on rod.		177in.Lbs(20Nm)	
Operating pressure.	-1~150PSI (10BAR)	-1~150PSI (10BAR)	-1~150PSI (10BAR)
Power supply		20~250, 50/60Hz Vac/ Vo	dc
Power consumption		10 VA (Max.)	
Ambient temp.		-40°C~60°C	
Medium temp.		-40°C~80°C	
Signal output	Relay, SPDT, 3A,	/250VAC, 3A/28VDC, SSR(M	OSFET)400mA/60 VAC/ VDC
Min. material density sensed		Solid: ≥0.32g/cm3	
Time delay		1 Second / Operate; 2~5 Sec	conds / Reset
Remote-test		Yes	
Vibrating frequency.		395~405HZ	
Selectable Fail-safe		Hi./ Lo.	
Selectable sensitivity		Hi./ Lo.	

# **EXPLOSION PROOF TYPE**

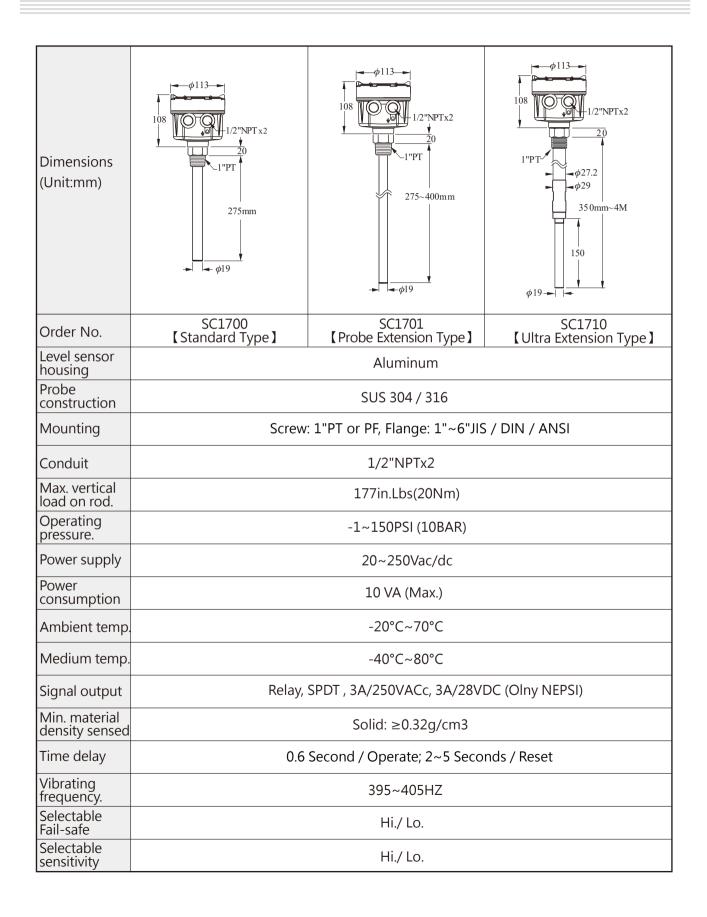

# **INSTALLATION**

## Vertical Installation (Figure 1):

- 1. Install the vibrating probe away from the inlet to avoid material impact or false readings.
- 2. Note the material flow pattern and place the vibrating probe in the appropriate position to avoid overflow.

## Horizontal Installation (Figure 2)

- 1. Install the vibrating probe away from the inlet to avoid material impact. If this is unavoidable make use of a shield or barrier for protection.
- 2. Installing the vibrating probe at a 20 degree incline will optimize the results and increase sensitivity.
- 3. Keep the conduit facing downward to avoid moisture getting inside the housing.

#### Notice:

- 1. Users are advised to tighten the connection by using a spanner.
- 2. Do not bend the probe, put force on it or attempt to modify the probe length.
- 3. The maximum vertical pressure of the vibrating probe is 177in.Lbs (20Nm)

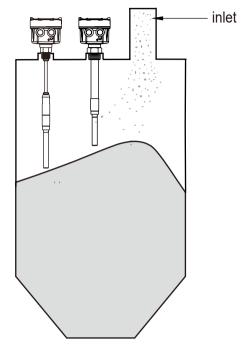


Figure 1

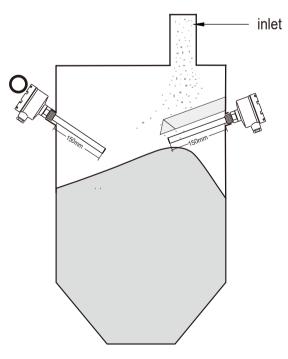


Figure 2


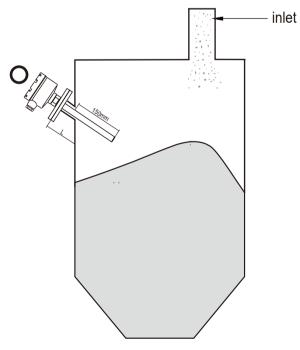


Figure 3

# **OPERATING INSTRUCTIONS (EURO TERMINAL)**

SC2100X, SC2110X, SC2200X, SC2210X,SC2300X, SC2500X, SC1700X, SC1701X,SC1710X

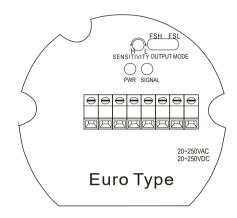

# **Terminal Function**

• L+, N-: Power Supply

NC, COM, No: Relay Output

• RT1, RT2: Remote-Test

• 汽车: SSR(MOSFET) Output

### **Panel Function**

PWR: Power Supply (Green Light)

SIGNAL: Output Indication (Red Light)

- FSH: Power On. The signal lamp is on and the relay is conductive. While the vibrating probe senses the material, the signal lamp is off and relay is not conductive.
- FSL: Power On. The signal lamp is off and the relay is not conductive. While the probe senses the material, the signal lamp is on and relay is conductive.
- SENSITIVITY L: Low Sensitivity
- SENSITIVITY H: High Sensitivity

# Sensitivity Adjustment


 SENSITIVITY: Located upside of PCB. When switching to H position, it has the highest sensitivity. When switching to L position, it has the lowest sensitivity. The original setting is at L position and users are able to adjust the sensitivity depends on the specific gravity of material.

☐H: High Sensitivity

(Suitable for detecting low specific gravity material)

□L: Low Sensitivity

(Suitable for detecting low specific gravity material)

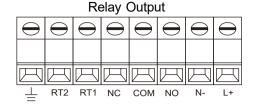

	,	SSR	(MO	SFE	T) O	utpu	t
$\ominus$	$\ominus$	$\bigcirc$	$\ominus$	$\ominus$	$\bigcirc$	$\bigcirc$	$\ominus$
四	四	四	四	四	四	四	四
<u></u>	RT2	RT1		בַר	<u> </u>	N-	L+
				•			

# Fail-Safe High / Low Protection

FSH (Fail-Safe High) Protection:

Switch to FSH mode.

Normal Status: The signal lamp is on. It means that the vibrating probe does not sense the material and the relay is conductive.


Failure: When the power shuts down, the signal lamp is off. It means that the vibrating probe is voided and the relay is not conductive.

## FSL (Fail-Safe Low) Protection:

Switch to FSL mode.


Normal Status: The signal lamp is on. The vibrating probe senses the material and the relay is conductive.

Failure: When the power shuts down, the signal lamp is off. The vibrating probe is voided and the relay is not conductive.

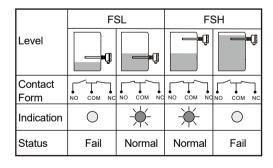

# **OPERATING INSTRUCTIONS (BARRIER TERMINAL)**

SC2100X, SC2110X, SC2120X, SC1700X, SC1701X, SC1710X

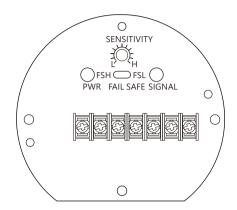

## **Terminal Function**

- L+, N-: Power Supply
- NC, COM, No: Relay Output
- RT: Remote-Test
- ᢣ<u>ᠴ᠇ᢇ</u>ᢧ : SSR(MOSFET) Output

### **Panel Function**

- PWR: Power Supply (Green Light)
- SIGNAL: Output Indication (Red Light)
- FSH: Power On. The signal lamp is on and the relay is conductive. While the vibrating probe senses the material, the signal lamp is off and relay is not conductive.
- FSL: Power On. The signal lamp is off and the relay is not conductive. While the probe senses the material, the signal lamp is on and relay is conductive.
- SENSITIVITY L: Low Sensitivity
- SENSITIVITY H: High Sensitivity


# Sensitivity Adjustment

- 1. SENSITIVITY: Located upside of PCB. When switching to H position, it has the highest sensitivity. When switching to L position, it has the lowest sensitivity. The original setting is at L position and users are able to adjust the sensitivity depends on the specific gravity of material.
- ☐H: High Sensitivity

(Suitable for détecting low specific gravity material)

□L: Low Sensitivity

(Suitable for detecting low specific gravity material)

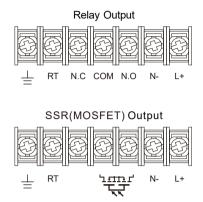

# Fail-Safe High / Low Protection

## FSH (Fail-Safe High) Protection:


Switch to FSH mode.

Normal Status: The signal lamp is on. It means that the vibrating probe does not sense the material and the relay is conductive. Failure: When the power shuts down, the signal lamp is off. It means that the vibrating probe is voided and the relay is not conductive.

# FSL (Fail-Safe Low) Protection: Switch to FSL mode.

Normal Status: The signal lamp is on. The vibrating probe senses the material and the relay is conductive.


Failure: When the power shuts down, the signal lamp is off. The vibrating probe is voided and the relay is not conductive.

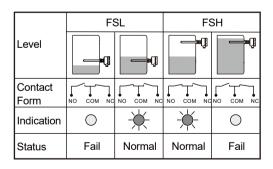

# MODEL NUMBER / ORDER CODE COMPARISON TABLE

Model Number	Order Code
SC2100	SCX10000-AAA
SC2110	SCX10000-BAA
SC2120	SCX10000-CAA
SC2300	SCX10000-DAA
SC2500	SCX10000-EAA
SC2510	SCX10000-FAA
SC1700	SCX100□□-AAA
SC1701	SCX100□□-BAA
SC1710	SCX100□□-CAA

# ORDER INFORMATION

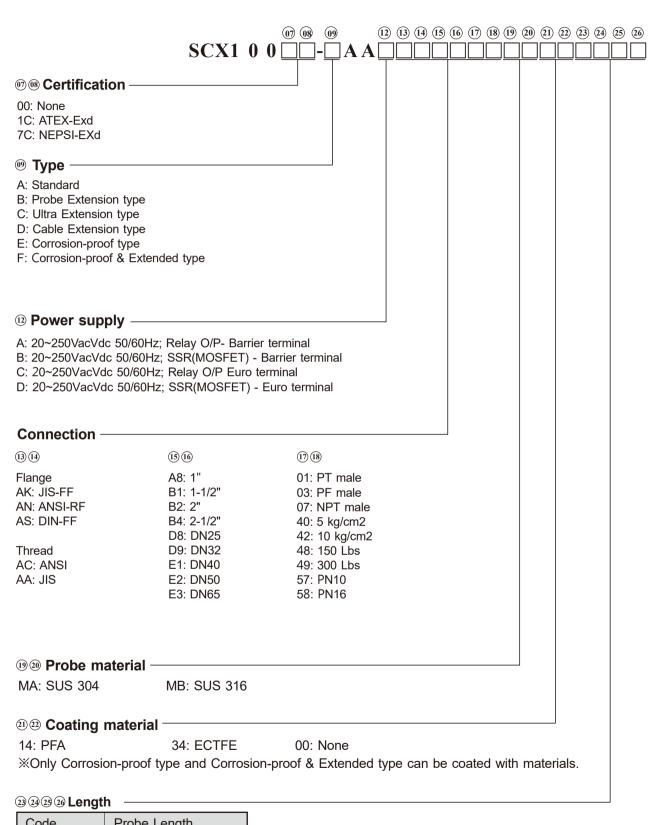

Code	Flobe Length
0275	Standard
0275~0400	275~400mm
0600~A150	600~15000mm

# Global Network



#### Head Quarter

Taiwan FineTek Co., Ltd. - Taipei Head Quarter No.16, Tzuchiang St., Tucheng Industrial Park New Taipei City 236, Taiwan

TEL: 886-2-2269-6789 FAX: 886-2-2268-6682 EMAIL: info@fine-tek.com

### Asia

China Fine automation Co., Ltd. - Shanghai Factory No.451 DuHui Rd, MinHang District, Shanghai,

China 201109
TEL: 86-21-6490-7260
EMAIL: info.sh@fine-tek.com

Singapore
 FineTek Pte Ltd. - Singapore Office
 37 Kaki Bukit Place, Level 4 Singapore 416215
 TEL: 65-6452-6340
 EMAIL: info.sg@fine-tek.com

Indonesia
PT. FineTek Automation Indonesia - Indonesia Office
PERGUDANGAN TUNAS BITUNG
JL. Raya Serang KM. 13,8, Blok C3 No. 12&15, Bitung Cikupa,
Tangerang 15710
TEL: 62 (021)-2958-1688
EMAIL: info.id@fine-tek.com

#### North America

California, U.S.

Aplus Finetek Sensor Inc. - US Office 355 S. Lemon Ave, Suite D Walnut, CA 91789

TEL: 1 909 598 2488 FAX: 1 909 598 3188 EMAIL: info@aplusfine.com

#### Europe

Germany

FineTek GmbH - Germany Office Bei den Kämpen 26 21220 Seevetal-Ramelsloh, Germany

TEL: +49-(0)4185-8083-12 FAX: +49-(0)4185-8083-80

FAX: +49-(0)4185-8083-8 EMAIL: info@fine-tek.de

 Mütec Instruments GmbH - Germany Office Bei den Kämpen 26

21220 Seevetal-Ramelsloh, Germany

TEL: +49-(0)4185-8083-0 FAX: +49-(0)4185-8083-80 EMAIL: muetec@muetec.de



Distributor:		